

Digital Tire Monitoring. Anytime. Anywhere.

ContiConnect[™] Live - get tire information regardless of the vehicle's location.

Get all the information you need about the tire condition of your trucks and trailers. Fleet managers gain highly accurate temperature and pressure data from inside the tire as well as mileage and tread depth prediction options. The information is available in real time and provides unprecedented convenience and flexibility.

Your Business

Your vehicles are out on the road, and some trailers are even left unhooked. How to control the tire pressure of all your vehicles? Get to know the intelligent tire management solution ContiConnect™ Live to ensure road safety, low maintenance costs, and fuel savings.

Our Solution

The solution can transmit data regarding pressure, temperature and mileage to your web portal. Monitor your trucks and even freestanding trailers in real time on your PC, tablet, or smartphone – no matter where they are.

Your Benefits

React immediately to urgent situations thanks to 24/7 real-time tire monitoring. Check exactly where your truck or trailer is. The battery-powered units ensure data transmission for four weeks and provide you with GPS information, mileage, pressure and temperature data.

Data Collection

The gathered data is provided to you in the form of a detailed analysis, which is the basis for relevant tire maintenance predictions.



Data Transmission

ContiConnect[™] Live transmits real-time sensor data from your tires to the ContiConnect[™] web portal.



Data Stream

Check the conditions of your tires via mobile device or on your PC and receive specific alerts if the tire pressure changes.



Truck and Trailer Monitoring


Keep track of all your vehicles 24/7, regardless of their location, thanks to live transmission of pressure, temperature, mileage and GPS information.



Trailer Stand-Alone Monitoring

Battery-powered units ensure data transmission even when the trailer is unhooked. The daily wakeup mode lasts for approx. 4 weeks.

How it works

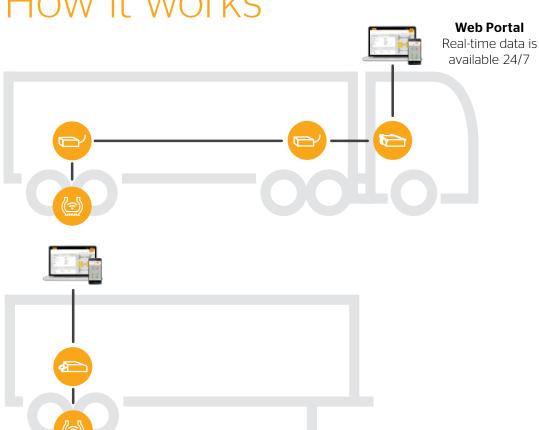





Sensor

Monitors the tire condition and sends the data to the connecting units.



Link Enabler

Receives sensor signals and transmits them to the main units.



Stand-Alone Trailer

Trailer Link

Receives sensor signals and transmits the data to the web portal.



Truck and Trailer

In-cabin Link

Receives sensor signals and transmits the data to the web portal.